
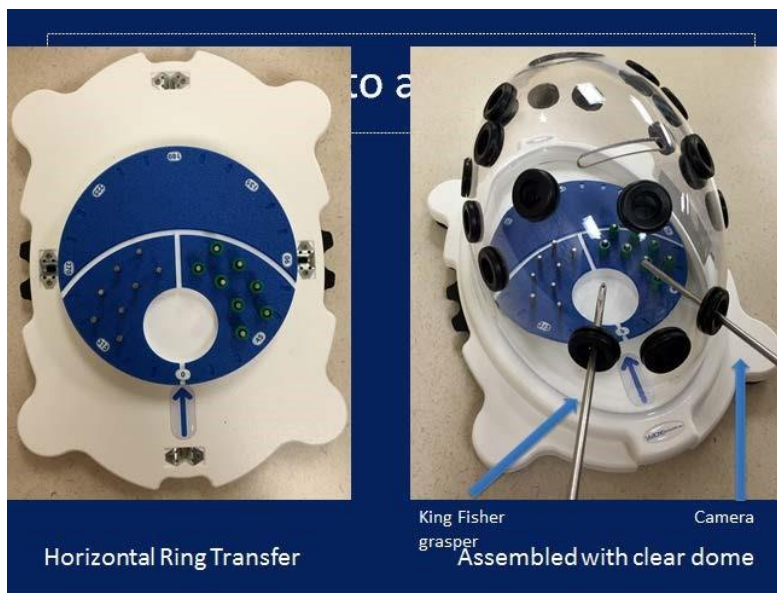


Module 3 Instructions

1. Use the FAST horizontal ring transfer module. Align the arrow on the baseplate with the 0 position on the module.

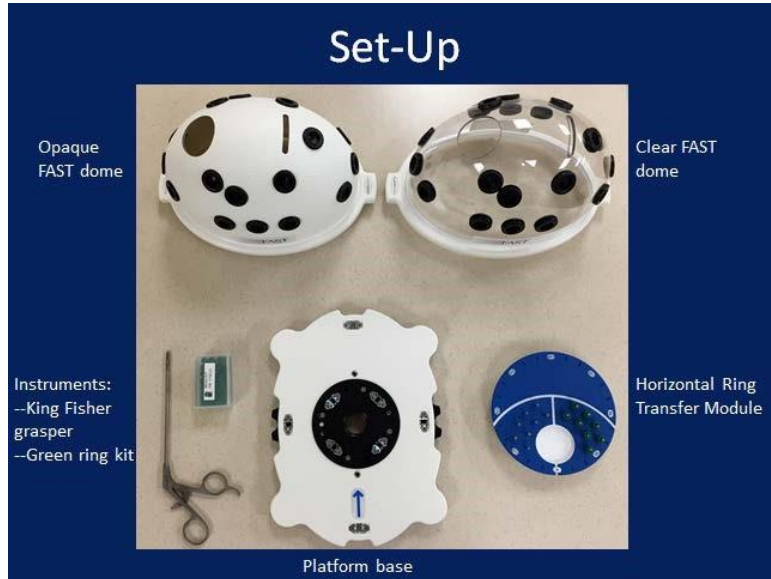

Horizontal Ring Transfer:

Place the rings on the module as pictured above. Using your RIGHT hand, place the camera in the right portal. Place the grasper in the left portal. Use the grasper to transfer all of the rings from the posts on the right to the left. Do not stop to pick up any rings that drop. Perform the number of trials necessary to complete the task without errors. Repeat the task with the camera in your LEFT hand.